

Oil quantity and sort / Recommended oil change intervals

	Hydraulic wall saw heads and power packs		
PENTRUDER	6-10/12	6-16	8-20
Arm transmission	180 ml Omega 690 / 100 hours <i>Check oil regularly</i>	500 ml Omega 690 / 200 hours	500 ml Omega 690 / 200 hours
Travel worm gear transmission	60 ml Omega 680 / 200 hours	60 ml Omega 680 / 200 hours	60 ml Omega 680 / 200 hours
Arm feed worm gear transmission	60 ml Omega 680 / 200 hours	80-100 ml Omega 680 (100 ml in compl. Dry machine) / 200 hours	80-100 ml Omega 680 (100 ml in compl. Dry machine) / 200 hours
PENTPAK	Pentpak 15	Pentpak 20	Pentpak 25
Power pack	Approx. 7 L Mobil, DTE15 / 100 hours <i>Check oil level daily.</i>	Approx. 10 L Mobil DTE15 / 100 hours <i>Check oil level daily.</i>	Approx. 10 L Mobil DTE15 / 100 hours <i>Check oil level daily.</i>
Power pack gear transmission	0.3 L Omega 690 / 200 hours	0.3 L Omega 690 / 200 hours	0.3 L Omega 690 / 200 hours

1. For hydraulic oils, used in all Pentpak power packs, we recommend: Mobil DTE15 or hydraulic oil quality HLP 46 or equivalent.
2. For all wall saws, in gearbox and arm gearboxes, preferably use Omega 690.
3. In worm gear transmissions, use only Omega 680.

All Mobil oils are available from Mobil in 20 L containers or 205 L barrels.
Omega 680 and 690 oils are available from Omega in 5, 20 L canisters or 205 L barrels.

**Please use only these oils in Tractive products.
If other oils than the recommended are used in transmissions, oil should be changed twice as often.**